




HEAVY DUTY T-BONE

TOOLS NEEDED


- 9/16 Wrench
- 9/16 Socket Wrench

INSTALLATION INSTRUCTIONS


1. Using 2 HEX BOLTS, WASHERS, AND LOCK NUTS, connect the SUPPORT TUBE to the UPPER TUBE. Use the wrench to hold the HEX BOLT on one side while using the socket wrench to tighten the LOCK NUT on the other.

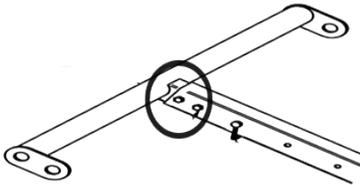

2. Using the WIRE LOCK PIN, connect the SUPPORT TUBE to the LOWER TUBE.

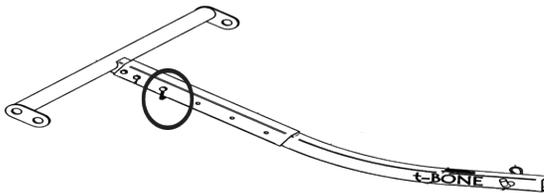

3. When you're ready to install and use, insert the fully assembled T-BONE into a standard 2" receiver and secure with the HITCH PIN & HITCH CLIP. Adjust for the height of your truck bed by adjusting the SUPPORT TUBE and the LOWER TUBE, locking in place with the WIRE LOCK PIN.

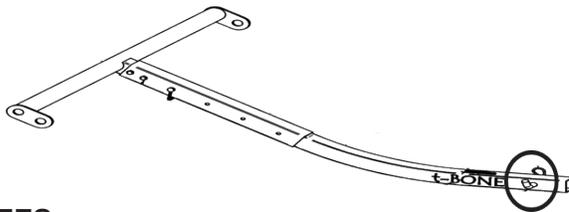

USAGE NOTES

- 300 pound weight capacity
- The ears can be used as anchors for straps



PARTS LIST

- A - LOWER TUBE
- B - UPPER TUBE
- C - SUPPORT TUBE
- D - 9/16" HEX BOLT
- E - 9/16" LOCK NUT
- F - WIRE LOCK PIN
- G - HITCH PIN & CLIP

